



Apex Low Voltage System Quick Connection Guide

1: Communication Cable Connection

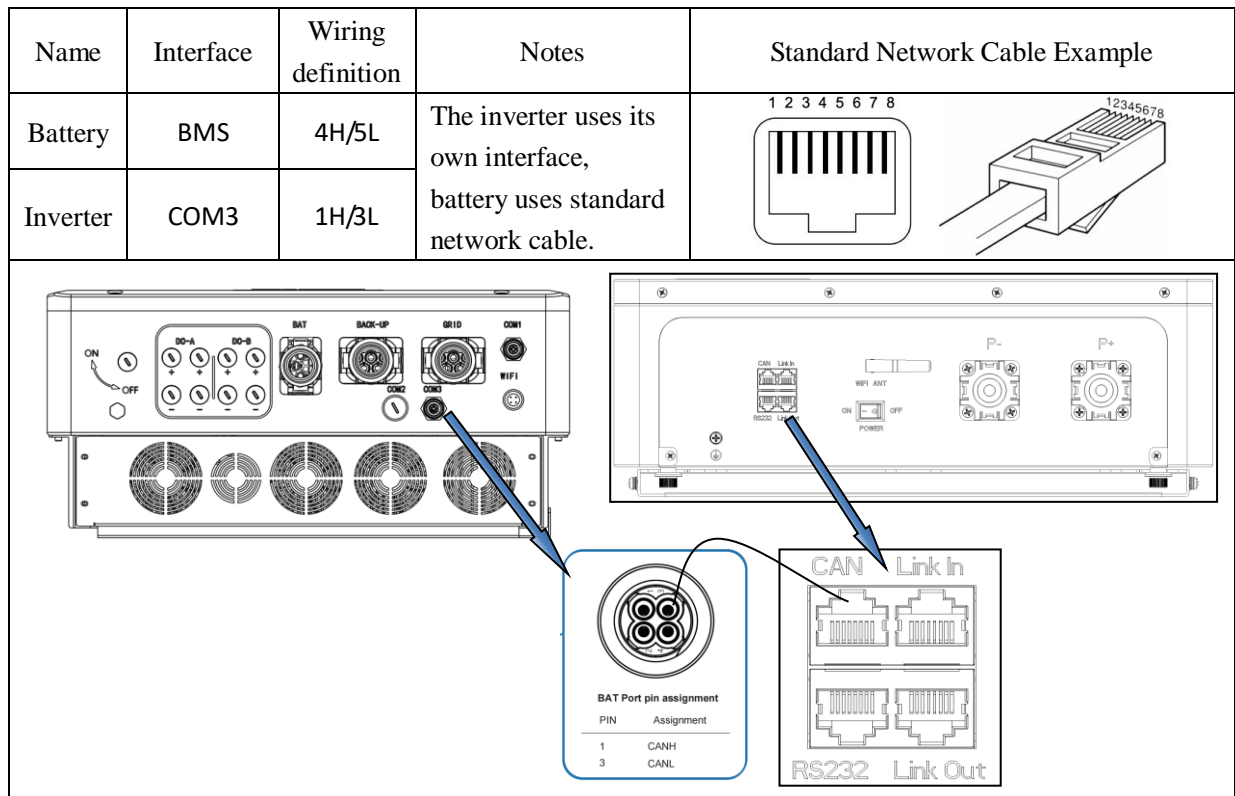

2: Single System Inverter Setup Instructions

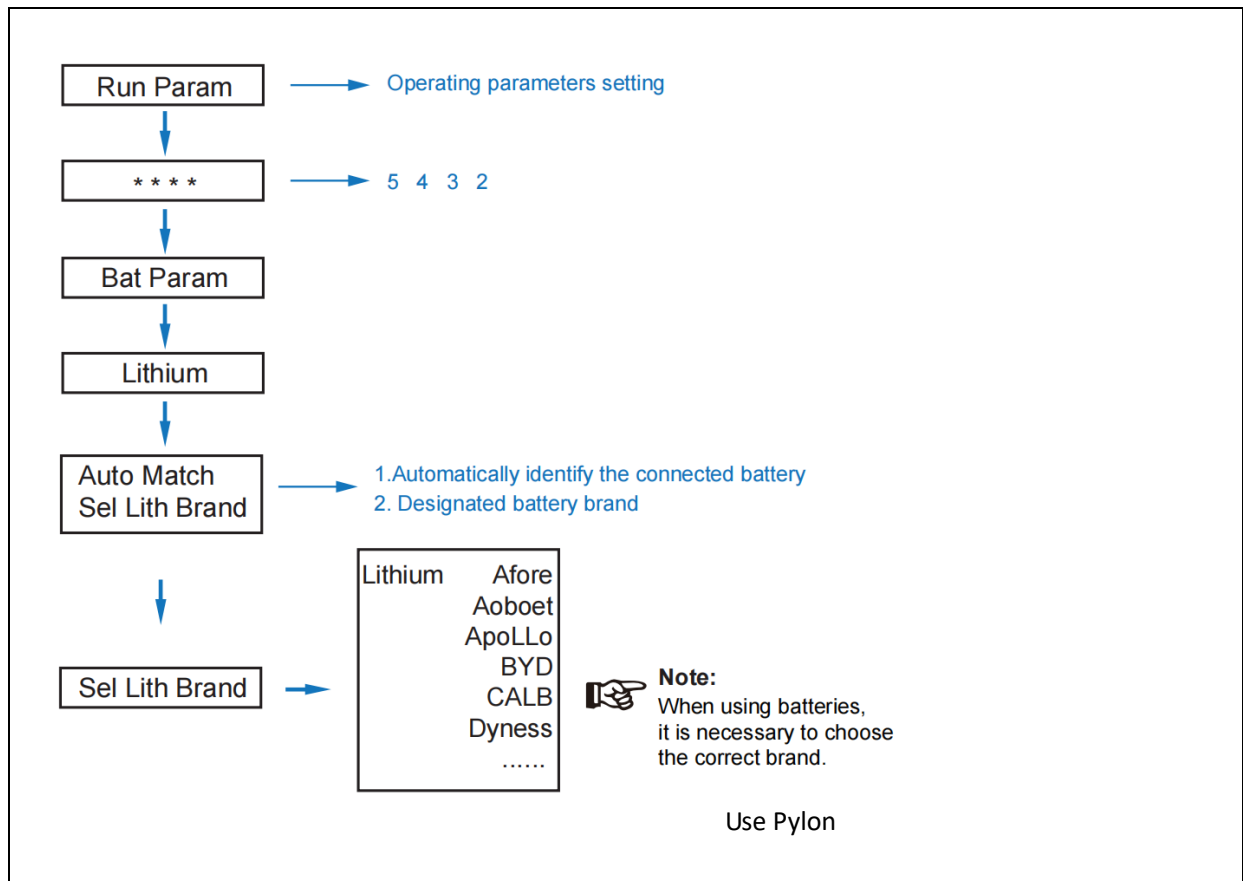

3: Battery Parallel Connection

